


Installation Instructions: Shifter Boot


Part #2104




1. Remove knob. Slip boot over stick and down to floor. Use chalk to scribe the outline of the boot on the carpet.

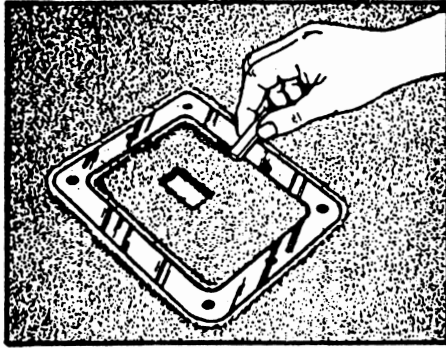


2. Remove the boot and place the chrome plated retainer plate exactly within the scribed outline. Scribe the inside opening of the plate on the carpet with chalk.

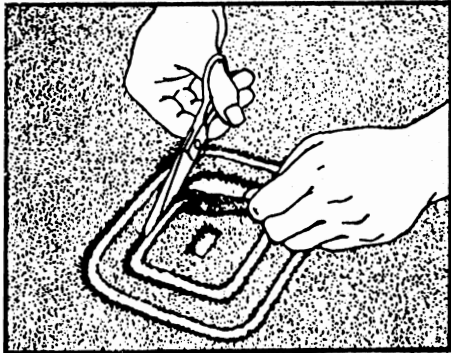

3. Cut the carpet around on the inside opening chalk line.

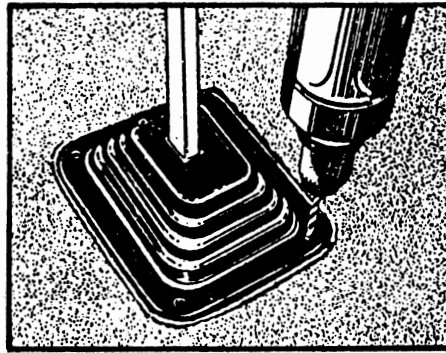


4. Replace the boot. Drill 1/8" diam. holes through floor using boot holes to locate hole positions.

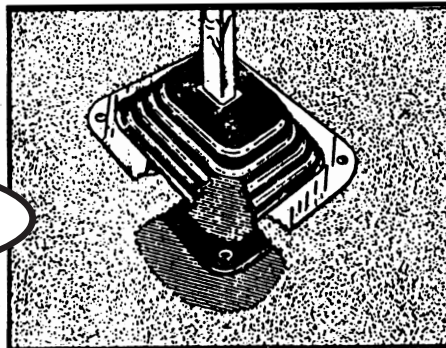


5. Slip bottom boot lip under carpet. Remove paper on chrome side of hold-down plate. Place hold-down plate into position and fasten with sheet metal screws supplied

Installation Instructions: Shifter Boot


Part #2104

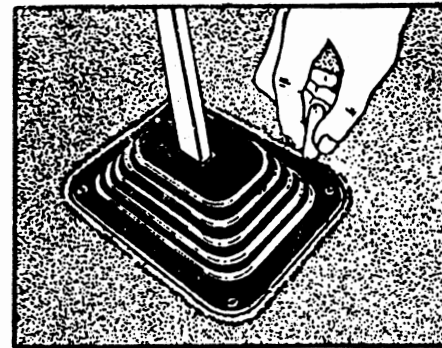


1. Remove knob. Slip boot over stick and down to floor. Use chalk to scribe the outline of the boot on the carpet.

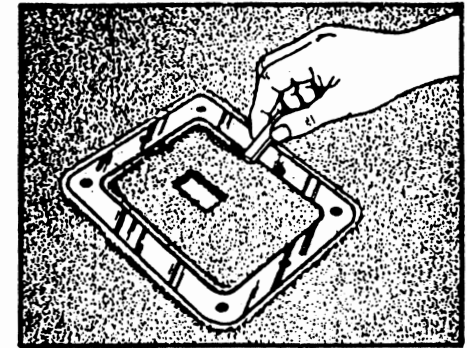


2. Remove the boot and place the chrome plated retainer plate exactly within the scribed outline. Scribe the inside opening of the plate on the carpet with chalk.

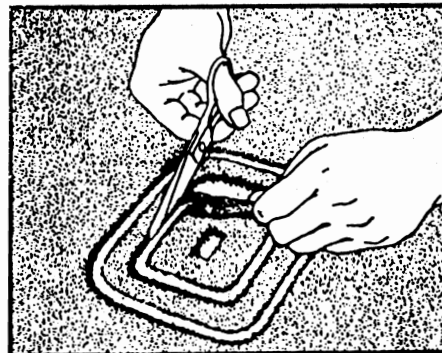

3. Cut the carpet around on the inside opening chalk line.

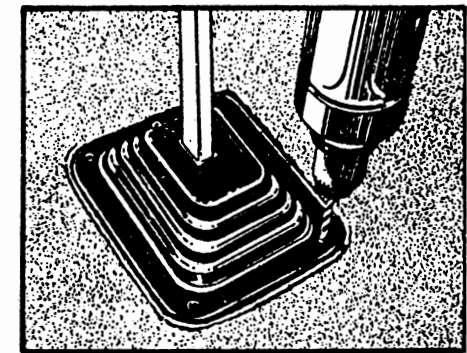

4. Replace the boot. Drill 1/8" diam. holes through floor using boot holes to locate hole positions.

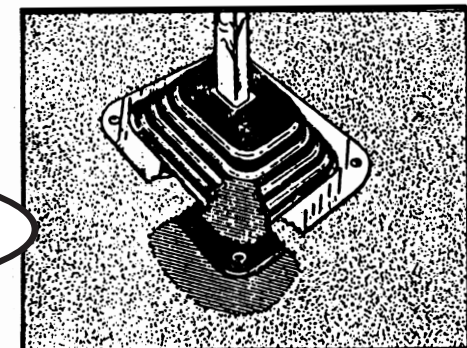

5. Slip bottom boot lip under carpet. Remove paper on chrome side of hold-down plate. Place hold-down plate into position and fasten with sheet metal screws supplied

James Duff Inc.
The Bronco Specialists since 1967

865.938.6696 www.dufftuff.com
6609 Bronco Ln.
Knoxville, TN 37921

1/1 11/06

James Duff Inc.
The Bronco Specialists since 1967

865.938.6696 www.dufftuff.com
6609 Bronco Ln.
Knoxville, TN 37921

1/1 11/06

